

## ICE-Trade Belt & Cover Pullers



**Belt Pullers**, for pulling the conveyor belt in the installation, or pulling the covers of for splicing the belt.

Type	Belt thickness (mm)	Max. pull (kg)
<b>ITBP-1</b>	till 16	800
<b>ITBP-2</b>	from 14 till 27	3.000





**Belt Puller in the Straight Version**

Type	Belt thickness (mm)	Max. pull (kg)
<b>ITBPS-1</b>	till 16	800
<b>ITBPS-2</b>	from 14 till 27	1.500





**ICE-Trade sro**  
International Conveyor Equipment & Trading


Tel. + 421 948 222 891  
[info@ice-trade.com](mailto:info@ice-trade.com)  
[www.ice-trade.com](http://www.ice-trade.com)



The **Cover Puller** is developed to pull the covers of the belt for splicing, with the use of a strap-winch. The cover pullers are supplied with a strap and lacing eye.



Type	Max. pull (kg)
ITCP-1	600
ITCP-2	800

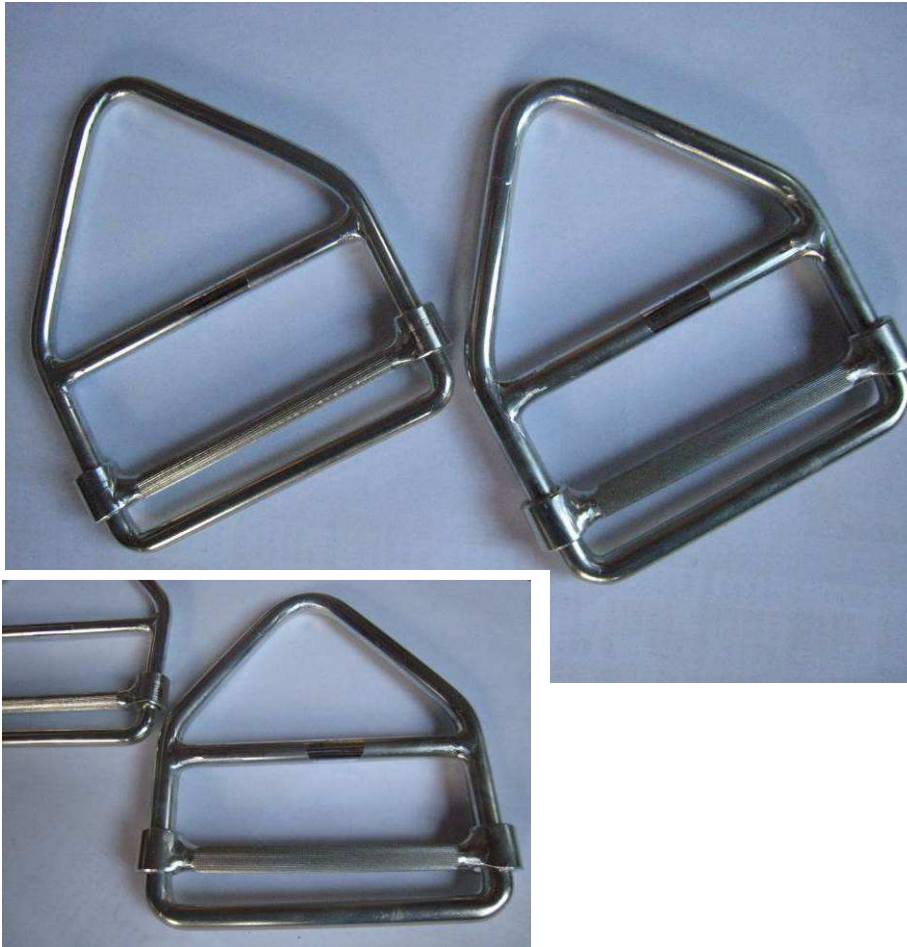

There are 2 models **Cover Pullers Econ** :

Type	Max. pull (kg)
<b>ITCP-1E</b>	600
<b>ITCP-2E</b>	1.250

Both are produced from high tensile steel.  
Because of its simplicity an excellent tool for a low budget !

All the belt and cover pullers are electro galvanized.

For safety we recommend, while pulling belts or covers of, to stay away from the pulling device min. 1,5 times the length of the pulling strap or cable.

It is not allowed using the pullers for lifting.

For further information, please do not hesitate to contact us.